


2. Instrument Panel

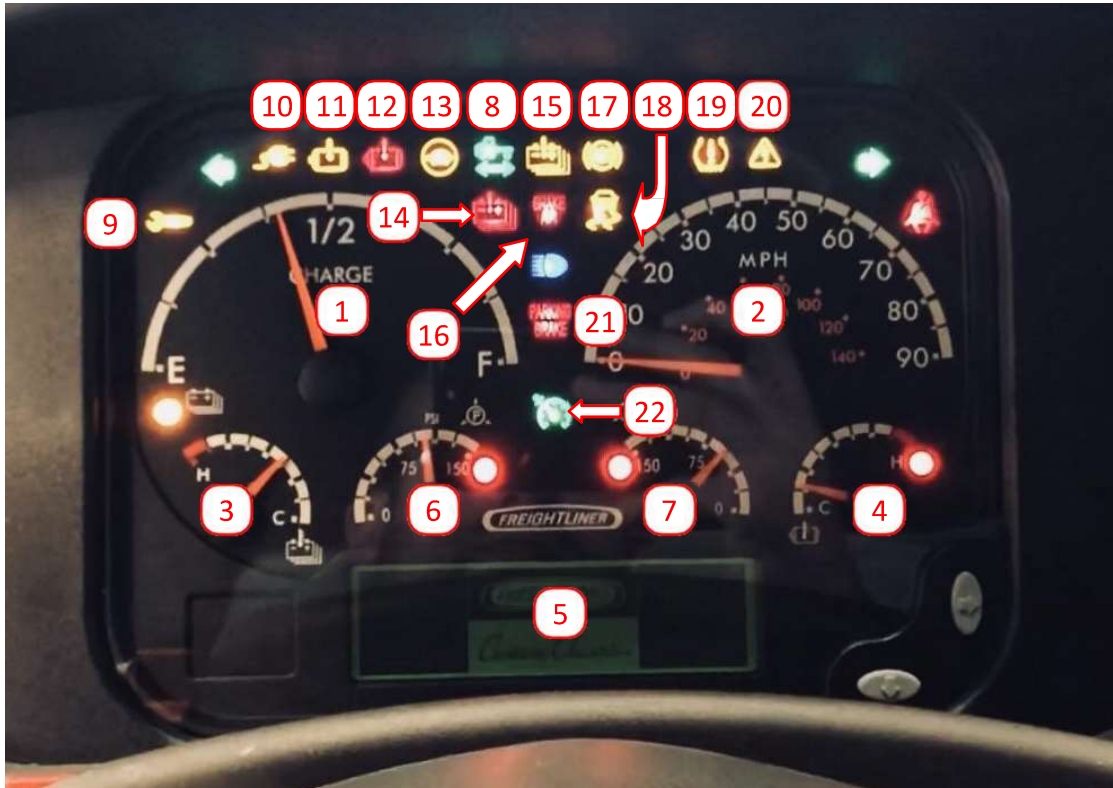

- | | |
|--|--|
| 1. Battery SOC (State of Charge) | 12. Critical Fault |
| 2. Vehicle Speed | 13. Limp Mode / De-rate |
| 3. HV Battery Temperature | 14. HV Battery Critical |
| 4. Motor Temperature | 15. HV Battery Warning |
| 5. Message Center | 16. Low Brake Air Warning |
| 6. Primary Air Pressure | 17. ABS |
| 7. Secondary Air Pressure | 18. ESC Event |
| 8. <i>Vehicle HV Enabled</i> Indicator | 19. Tire Pressure Monitoring System (TPMS) |
| 9. Service Required | 20. HVIL |
| 10. Charger Plugged In | 21. Park Brake Applied (On) |
| 11. Minor Fault | 22. Cruise Control Active (if equipped) |