



FUSE & RELAY LEGEND

F01 10A IGNITION SWITCH/PLUG/IGN  
 F02 10A IGNITION POWER ON  
 F03 10A AVIATION/AVIATION DET SW/IGN  
 F04 2A EXPANSION FUSE 24 BAT/PWR  
 F05A/B 25A EXPANSION FUSE 8 IN  
 F06 5A EXPANSION FUSE 24 BAT/PWR  
 F07A/B 10A EXPANSION FUSE 7 IN  
 F08 5A EXPANSION FUSE 9 BAT/PWR  
 F09A/B 2A EXPANSION FUSE 4 IN  
 F10 2A EXPANSION FUSE 6 IN  
 F11 2A EXPANSION FUSE 5 BAT  
 F12 20A BATT PWR RPT1 WASH/WOAR ON  
 F13A/B 20A EXPANSION FUSE 25 BAT/PWR  
 F14A/B 20A READING LAMP REAR BAT  
 F15 20A EXPANSION FUSE 20 BAT/PWR  
 F16 20A EXPANSION FUSE 22 BAT/PWR  
 F17A/B 20A EXPANSION FUSE 5 IN  
 F18 20A NS Q.STR/STR/STR/HAC/STR/IN  
 F19 20A EXPANSION FUSE 20 IN  
 F20 20A EXPANSION FUSE 20 IN  
 F21 20A READING LAMP FRONT BAT  
 F22 20A PEDAL ADJUST/REAR/FRONT 1.5A  
 F23 20A ABS HYD ABS PUMP/ABS 1.5A  
 F24 20A ABS POWER FEED 2.5A  
 F25 20A TRAILER ABS CONTROL/ABS PUMP  
 F26 20A HOUSE LOAD 1.5A  
 F27 20A EXPANSION FUSE 3 BAT  
 F28 20A BASCO 1.5A  
 F29 20A EXPANSION FUSE 1.5A  
 F30 20A EXPANSION FUSE 1.5A  
 F31 20A EXPANSION FUSE 1.5A  
 F32 20A EXPANSION FUSE 1.5A  
 F33 20A EXPANSION FUSE 1.5A  
 F34 20A EXPANSION FUSE 1.5A  
 F35 20A EXPANSION FUSE 1.5A  
 F36 20A EXPANSION FUSE 1.5A  
 F37 20A EXPANSION FUSE 1.5A  
 F38 20A EXPANSION FUSE 1.5A  
 F39 20A EXPANSION FUSE 1.5A  
 F40 20A EXPANSION FUSE 1.5A  
 F41 20A EXPANSION FUSE 1.5A  
 F42 20A EXPANSION FUSE 1.5A  
 F43 20A EXPANSION FUSE 1.5A  
 F44 20A EXPANSION FUSE 1.5A  
 F45 20A EXPANSION FUSE 1.5A  
 F46 20A EXPANSION FUSE 1.5A  
 F47 20A EXPANSION FUSE 1.5A  
 F48 20A EXPANSION FUSE 1.5A  
 F49 20A EXPANSION FUSE 1.5A  
 F50 20A EXPANSION FUSE 1.5A

S/N: 58178045  
 704T-R1A-E035  
 50A/12V S Q7

S/N: 58178033  
 704T-R1A-E035  
 50A/12V S Q7

897-1AH-C-R1 U06  
 COIL 12VDC  
 70A 14VDC  
 C2448


897-1AH-C-R1 U06  
 COIL 12VDC  
 70A 14VDC  
 C2448

871H-1C-C-R1 U13  
 COIL 12VDC  
 C2441

871H-1C-C-R1 U13  
 COIL 12VDC  
 C2441

A60-5396

REV E  
 PDM1 BATT 1

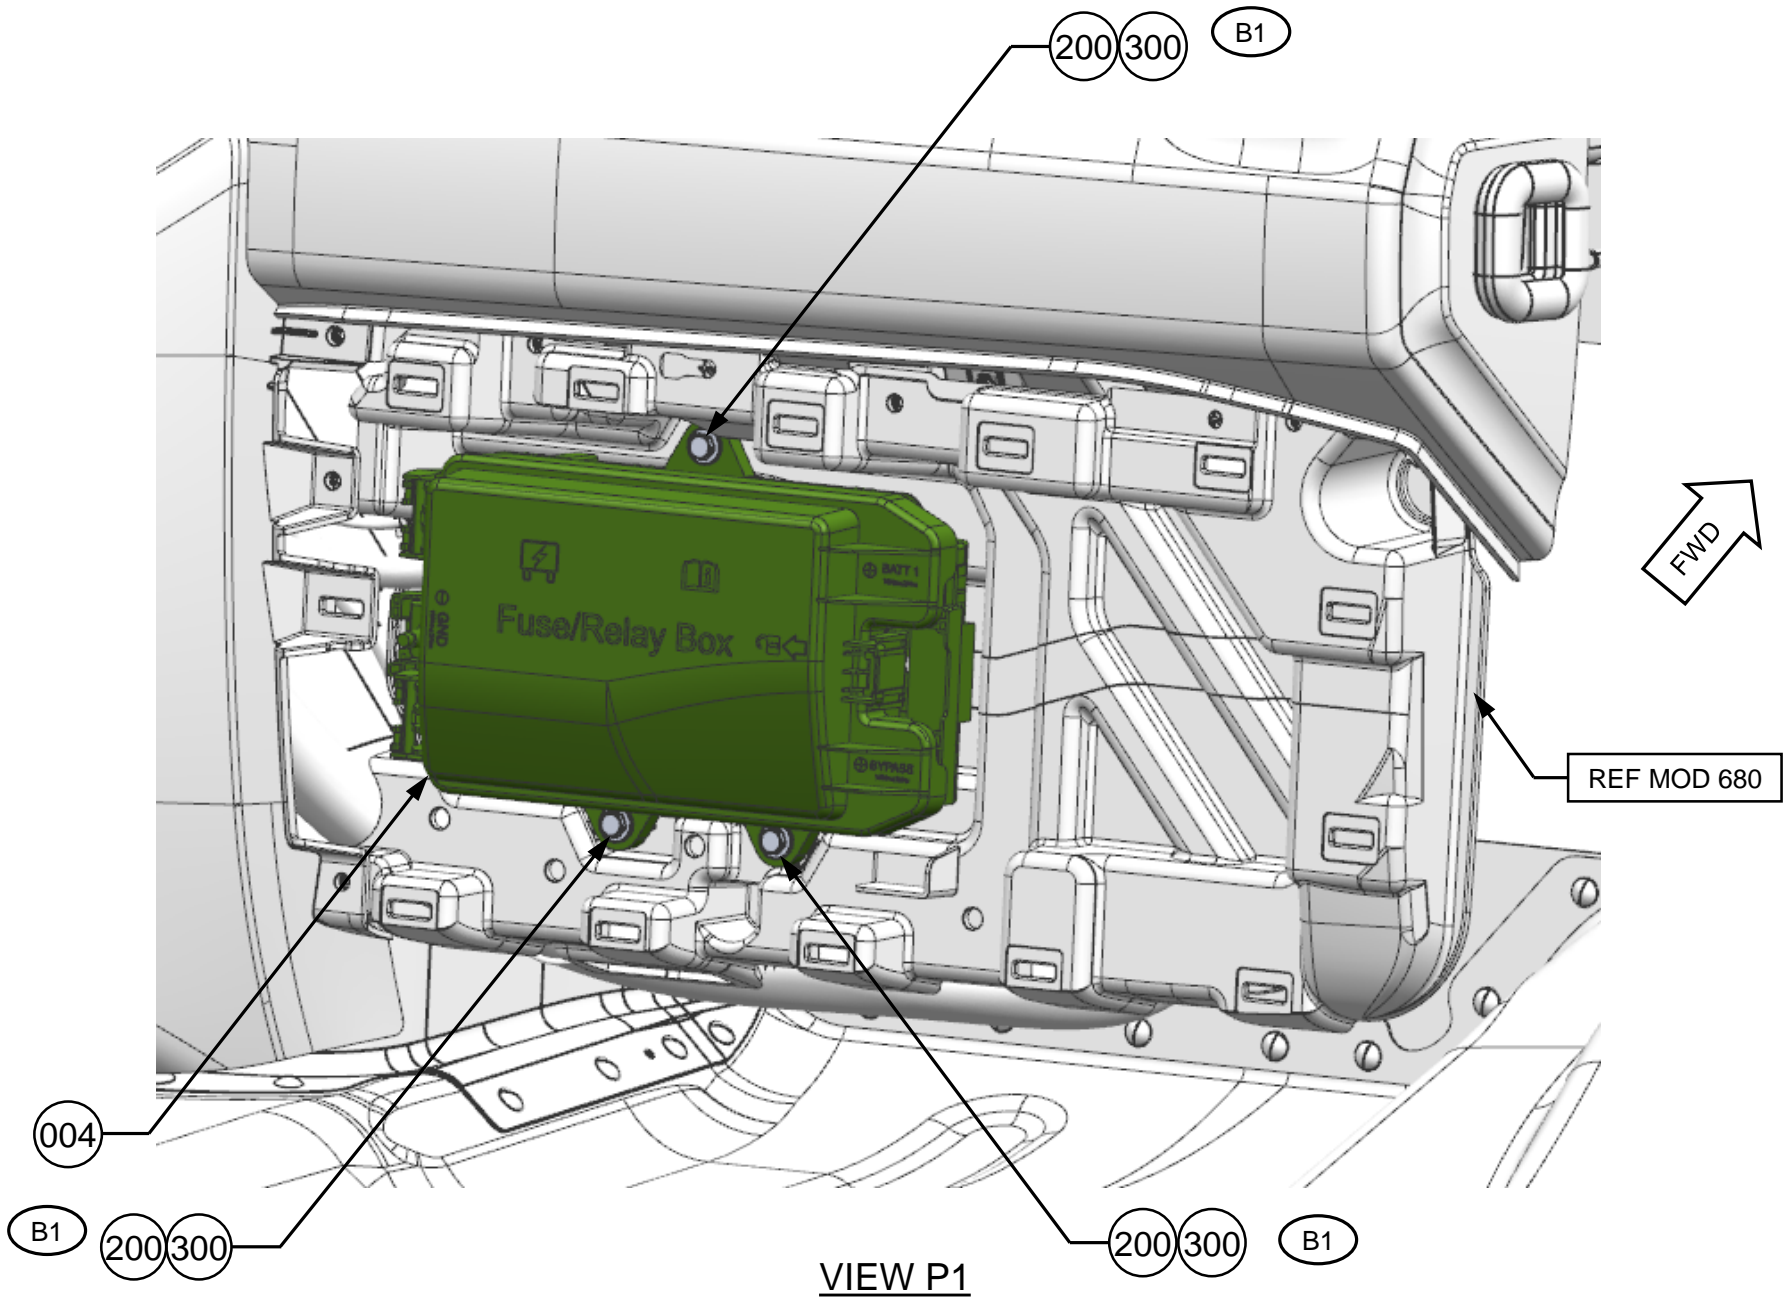

VIEW P1